

CONTENTS

Warnings	3
Components list	4
ASSEMBLING THE BASSINETTE	
Assembling bassinette	5
Fitting bootcover	7
USING THE BASSINETTE	
Securing child	7
Using with Wanderer Stroller	8
Using with Envy Stroller	9
Using adaptors with Envy Stroller	10-12
Configurations for Envy Stroller	13 - 17
Carrying bassinette	18
CARE AND MAINTENANCE	
Care and maintenance	19
CONTACTS	
Customer service	20

These instructions detail the safe use, assembly and maintenance of your product. Please read these instructions carefully and ensure that they are followed at all times. Failure to do so could result in serious injury or death.



WARNING TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE PRAM IS STATIONARY.

- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THE PRAM, UNLESS IT IS AN APPROVED ACCESSORY.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ARE FOLDING, UNFOLDING OR ADJUSTING THE PRAM, OTHERWISE THEY MAY BE INJURED.
- DO NOT USE THIS BASSINET ONCE THE CHILD CAN SIT UP UNAIDED.
- PUT ON ALL BRAKES WHENEVER YOU PARK THE PRAM.
- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- Check that the pram is fully erected and all safety locks are engaged before placing a child in the bassinet, otherwise they may be injured.
- Do not attempt to lift the pram by the bassinet.
- Remove bassinet from the pram when going up or downstairs or escalators.
- Do not use the bassinet near an open fire, barbecue or exposed flame.
- Never leave the harness buckled when not fitted to a child in the pram because the harness can form loops which may pose a strangulation hazard.
- This product is not intended for commercial use.
- To avoid danger of suffocation, keep any plastic bags away from babies and children.
- Regular inspect the bassinet and pram for any parts that are loose, broken, torn or missing. Attend to the problem as soon as it is observed.
- Do not use if any part is broken, torn or missing.
- Use only those accessories which are supplied by Dorel Australia, and approved for use with this bassinet.
- · Use only the mattress supplied with this bassinet.
- Vehicle is designed for use on flat or gently sloping surfaces and may be unstable on higher and uneven surfaces; be aware of the possibility of the vehicle tipping over.
- Use the tether strap to prevent the pram rolling away.
- This bassinet is suitable for use with the Bertini Envy (013415, 013416), Safety 1st Wanderer (#014906, #014907), & Safety 1st Envy (015607) strollers.
- The weight of the child in the bassinet shall not exceed 9kg.

Component List



Components Sold Separately



Wanderer Stroller



Envy Stroller


Assembling: Bassinette

ASSEMBLING BASSINETTE

- All components of your bassinette will be packaged as per Figure 1a.
- Remove the bootcover and the mattress.
- Lift the bassinette rim, as per Figure 1b.
- On the base-board, pull the wire brace down and attach to the base clips, as per Figure 1c. Repeat this for both braces on either side of the board.
- Raise the canopy frame into an upright angle, as per Figure 1d. You should hear a 'CLICK'.
- Attach the canopy fabric to the bassinette's outer rim by the 5 velcro tabs, as per Figure 1e.
- Replace the mattress lining.





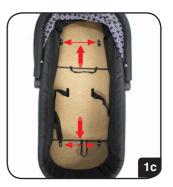





Note: Folding strollers and accessories will always have the potential to trap fingers or parts of the body between moving parts, causing injuries. Care should be taken while folding or unfolding.

Assembling: Bassinette

TO FOLD CANOPY

- Press canopy adjuster buttons in on both sides, as per Figure 2a, and lower canopy frame.
- If bootcover is attached (see page 7), make sure to unclip press studs before folding, as per **Figure 2b**.





TO UNFOLD CANOPY


• As per assembly steps from page 5, simply raise the canopy's frame to an upright angle. You should hear a 'CLICK', as per **Figure 2c**.



Assembling: Bassinette

TO FIT THE BOOTCOVER

- Place the end of the bootcover over the bassinette, attach the velcro on both sides.
- Inside the hood of the bassinette are two press studs, attach these to studs located on the lower inside of the bassinette hood, as per Figure 3.

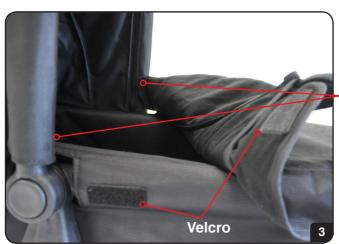




Press Stud

SECURING YOUR CHILD

- Adjust harness strap by moving slider on buckle.
- Guide the strap through the strap guard, and position as per Figure 4.
- Place infant in the bassinette and attach the buckle.
- The buckle is released by squeezing the buckle tongues together.



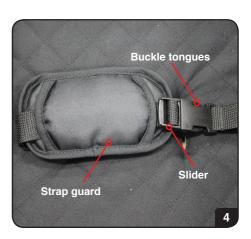

Using: Bassinette

FITTING TO WANDERER STROLLER

- Position the bassinette in **REARWARD FACING ONLY**, as per **Figure 5c**.
- Insert the bassinette into the frame, as per Figure 5a.
- Listen for 'CLICK'.
- Your stroller with bassinette is now ready for use.










CORRECT POSITION

TO REMOVE FROM WANDERER STROLLER

- Slide and hold down button (A) with one hand and press button (B) with the other hand, as per Figure 5d.
- Then press button (C) and lift out bassinette with both hands, as per Figure 5e.



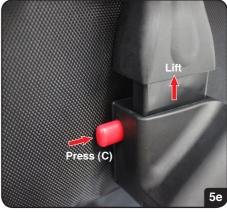

Using: Bassinette

FITTING TO ENVY STROLLER

- Insert the bassinette into the frame, as per Figure 6a.
- Listen for 'CLICK', as per Figure 6b.
- Your stroller with bassinette is now ready for use.






TO REMOVE FROM ENVY STROLLER


- Slide and hold down button (A) with one hand and press button (B) with the other hand, as per **Figure 6c**.
- Then press the button (C) as per Figure 6d.
- Then lift out the bassinette with both hands, as per Figure 6e.



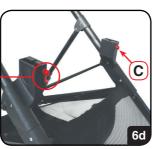



Using: Adaptors

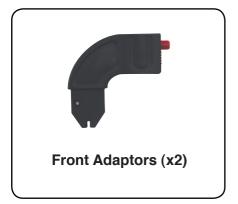



Using: Adaptors

FITTING FRONT ADAPTORS

- The front adaptors are used when second seat or bassinette need to be installed.
- Insert both front adaptors into the frame as per Figure 7a.
- Listen for 'CLICK'.
- Repeat for other side.

Note: To remove the front adaptors. Slide and hold down button (A) and press button (B), as per Figure 7b. Then remove the adaptor, as per Figure 7c. Press the button (C) as per Figure 7d. Repeat for other side.



Using: Adaptors

FITTING REAR ADAPTORS

- The rear adaptors are used when a second seat, bassinette or infant carrier need to be installed at the rear of the stroller frame.
- Align the adaptor on the rear frame as per Figure 8a. Slide the adaptor down it until it locks in place.
- Ensure that the adaptor has locked onto the frame.
- Repeat for other side.

Note: To remove the adaptors. Pull the adaptors release lever (A) in then slide the adaptor up and off the frame, as per Figure 8b. Repeat for other side.



FITTING ONE BASSINETTE TO ENVY STROLLER (Forward Facing)

- Insert the seat posts into the frame.
- Listen for 'CLICK'.
- For further instruction regarding installation please refer to page 9.



FITTING ONE BASSINETTE TO ENVY STROLLER (Rearward Facing)

- Insert the seat posts into the frame.
- Listen for 'CLICK'.
- For further instruction regarding installation please refer to page 9.



FITTING TWO BASSINETTES TO ENVY STROLLER

- Insert the adaptors followed by the bassinettes into the frame.
- Listen for 'CLICK'.
- For further instruction regarding installation please refer to pages 10-12.



FITTING TWO BASSINETTES TO ENVY STROLLER

- Insert the adaptors followed by the bassinettes into the frame.
- Listen for 'CLICK'.
- For further instruction regarding installation please refer to pages 10-12.



FITTING TWO BASSINETTES TO ENVY STROLLER

- Insert the adaptors followed by the bassinettes into the frame.
- Listen for 'CLICK'.
- For further instruction regarding installation please refer to pages 10-12.



Using: Bassinette

CARRYING THE BASSINETTE

- When not attached to the Wanderer 3-Wheel stroller, the bassinette can be used as a carry-cot.
- When doing so, user must ensure the following:
 - The canopy must be locked into the upwards position (listen for 'CLICK'), as per Figure 9a.
 - Always carry bassinette by the handle provided at the top of the hood, as per Figure 9b.
 - Always place the bassinette on a smooth horizontal surface, clear of any cords, strings, etc.
 - Do not use on an elevated surface such as a table, bed, etc.





Care and Maintenance

CARE AND MAINTENANCE

- Always store in a clean and dry place.
- Clean the frame by wiping with a damp cloth.
- Do not use abrasives, bleach or strong detergents.
- Spot clean fabrics with warm water and mild soap.
- Ensure fabric is dry before storing.
- Regularly check for loose parts and tighten when required.
- Damaged or broken parts should be immediately replaced.

safety1st.com.au

DOREL AUSTRALIA PTY LTD 655-685 Somerville Road Sunshine West Victoria 3020

Email: customerservice@dorel.com.au

Phone: 1300 809 526 Hours: 8:30 am - 5:00 pm Monday to Friday

IGC DOREL NEW ZEALAND LTD

14 Sir William Avenue

East Tamaki Auckland 2013

Email: customerservice@igc.co.nz Phone: 0800 628 000 (toll free) Hours: 8:00 am - 5:00 pm Monday to Friday





Specifications are subject to change without notice.
Copy or reproduction without permission is prohibited.
© 2013 Dorel Australia Pty Ltd. All Rights Reserved.

www.dorel.com.au