

Safety 1st®

ENVY
4 WHEEL STROLLER

Suitable for one, for two, for twins.



Illustration and designs may vary.

CONTENTS

Warnings	3
Components list	4-6

ASSEMBLING THE STROLLER

Opening stroller	7
Wheel assembly	8-9
Fitting & removing seat	10
Canopy	11
Bumper bar	12

USING THE STROLLER

Adjusting handle height	12
Apply brake & adjusting seat angle	13
Operating swivel lock & adjust footrest	14
Fit bootcover	15
Removing seat liner	16
Securing your child	17
Adjusting harness height	18
Folding / Unfolding / Carrying stroller	19
Fit single raincover	20

BASSINETTE, INFANT CARRIER & ADAPTERS

Install and use bassinette	21-22
Install and use infant carrier	23-25
Using adapters	26-29

VARIOUS CONFIGURATIONS

Configurations	30-50
----------------------	-------

CARE & MAINTENANCE

Care & maintenance	51
Notes	52-53

CONTACTS

Customer service	54
------------------------	----

These instructions detail the safe use, assembly and maintenance of your product. Please read these instructions carefully and ensure that they are followed at all times. Failure to do so could result in serious injury or death.



WARNING TO AVOID INJURY OR DEATH:

- **FOLLOW THE MANUFACTURER'S INSTRUCTIONS.**
- **PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.**
- **DO NOT LEAVE CHILDREN UNATTENDED**
- **DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.**
- **MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.**
- **SECURE THE CHILD IN THE HARNESS AT ALL TIMES AND ENSURE THAT THE SAFETY HARNESS IS ADJUSTED FIRMLY BUT COMFORTABLY TO THE CHILD'S BODY.**
- A harness can form loops that may be a strangulation hazard, never leave harness straps connected when not fitted to a child in the stroller.
- Remove child from the stroller before going up or down stairs or escalators.
- Use the tether strap to prevent the stroller rolling away.
- Do not allow children to stand on the seat or footrest.
- Do not attempt to lift the stroller by the bumper bar or child tray, if it has one.
- Regularly inspect the stroller for any parts that are loose, broken, torn or missing. Attend to the problem as soon as it is noticed.
- Use only those accessories which are supplied by Dorel Australia, and approved for use with this stroller.
- Do not run or jog with this stroller.
- Never put hot liquids in any cup holder (when fitted).
- Do not use the stroller near an open fire, barbecue or exposed flame.
- This product is not intended for commercial use.

Note:

- The weight of the child using this stroller should not be more than **17kg**.
- Total weight for the shopping basket should **not** be more than **4kg**.
- The weight of the child using the infant carrier should not be more than **9kg**.
- The weight of the child in the bassinet shall not exceed **9kg**.

Components Supplied



Frame (x1)



Seat Unit (x1)



Mudguards (x2)



Rear Wheels (x2)



Front Wheels (x2)



Seat Bootcover



Rear Adaptors (x2)



Front Adaptors (x2)



**One Safe
Carrier Adaptors (x2)**



Single Raincover

Components Sold Separately



Bassinette



**One Safe
Infant Carrier**



**Maxi-Cosi
Infant Carrier**



Single Seat Unit



Double Raincover



**Maxi-Cosi Infant
Carrier Adaptors (x2)**



**Maxi-Cosi Infant
Carrier Adaptors**



**Infant Carrier
Extension Adaptors**

**Maxi-Cosi Infant Carrier
Adaptors & Extender Kit**

Components List



Note:

- The weight of the child using this stroller should not be more than **17kg**.
- Total weight for the shopping basket should **not** be more than **4kg**.
- The weight of the child using the Infant Carrier should **not** be more than **9kg**.
- The weight of the child using the Bassinette should **not** be more than **9kg**.
- Please refer to instruction manuals of the One Safe Infant Carrier, Maxi-Cosi Infant Carrier, and Safety 1st Bassinette for full weight and height specifications.

Assembling: Envy Stroller

OPENING STROLLER

- If the stroller has a security tie, please remove it.
- Lift storage latch to release, **(Figure 1a)**.
- Unfold stroller by lifting handle until the locking mechanism engages, **(Figure 1b)**.



Storage Latch



Note:

- Folding strollers and accessories will always have the potential to trap fingers or parts of the body between moving parts, causing injuries. Care should be taken while folding or unfolding.
- This vehicle is designed for use on flat or gently sloping surfaces and may be unstable on higher sloping and uneven surfaces. You should always be aware of the possibility of the stroller tipping on uneven or higher sloping surfaces.

Assembling: Envy Stroller

TO ATTACH REAR WHEELS TO AXLE

- Place stroller on its side.
- First fit both the left and right hand mudguards, as per **Figure 2a** to the frame by positioning the large holes in the mudguards over attachment lugs on the frame then push the mudguards down until they lock into position, as per **Figure 2b**.
- Insert the wheel axles into the wheel hub assemblies. Push the wheel onto the wheel hub until the wheel locks into position, as per **Figure 2c**. Repeat for other side.

Note: To remove the rear wheels. Press the metal tab located underneath the rear wheel assembly and pull the wheel away from the stroller and remove wheel on each sides, as per Figure 2d.




Assembling: Envy Stroller

TO FIT FRONT WHEELS

- Lift front of the stroller.
- Insert the front wheel post into the frame in the direction of the arrows as per **Figure 3a**, ensure that the wheel has locked into position.
- Repeat for other side.

Note: To remove the wheels. Press the buttons on top inside of the wheel posts and pull wheel away from stroller as shown in **Figure 3b**.

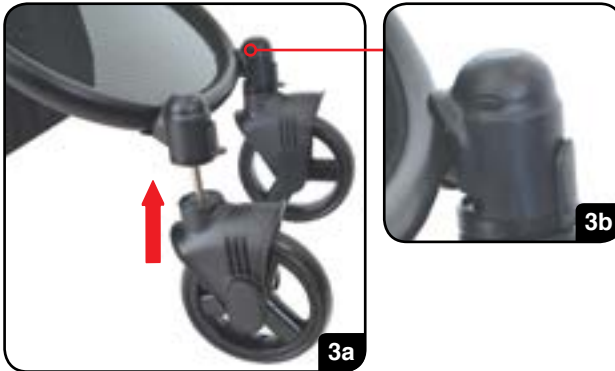

Assembling: Envy Stroller



FITTING THE FRONT SEAT

- The seat can be positioned in either the forward facing or rearward facing configuration. Insert the seat onto the frame by lowering the seat into the frame, as per **Figure 4a**.
- Listen for a '**CLICK!**', as per **Figure 4b**.



TO REMOVE THE SEAT

- Slide and hold down button (A) with one hand and press button (B) with the other hand, as per **Figure 5a**.
- Then press the button (C) as per **Figure 5b**.
- Then lift out the seat with both hands, as per **Figure 5c**.

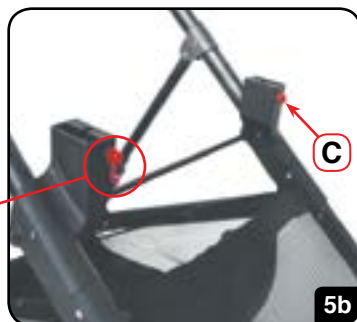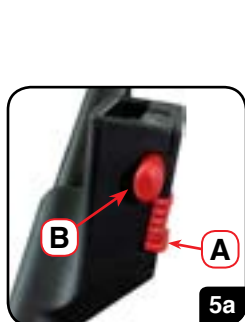

WARNING


Do not use this seat with any other models of stroller.

Assembling: Envy Stroller

ATTACHING CANOPY

- Align the canopy mounting slider (**A**) to the stroller frame slightly above the canopy mounting brackets (**B**), as per **Figure 6a & 6b**.
- Push the canopy slide down to engage and lock the canopy in position.
- Canopy can be extended by opening the zip on the side, as per **Figure 6c & 6d**.

Note: To remove the canopy. Lift up canopy release lever (**C**) and slide the canopy off the mounting bracket, as per Figure 6b. Repeat for other side.

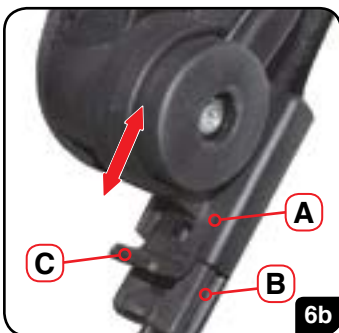

Assembling: Envy Stroller

ATTACHING BUMPER BAR

- Stand the stroller upright and align the bumper bar to the stroller, as per **Figure 7a**.
- Push the pins on the ends of the bumper bar into the holes in the frame as shown in **Figure 7b**, ensure that the bumper bar has locked into position.

Note: To remove the bumper bar. Press the bumper bar release button (A), located underneath the bumper bar on each side of the stroller seat, as per Figure 7b.



ADJUSTING HANDLE HEIGHT

- Press the button on the middle of the handle, as per **Figure 8a**.
- At the same time slide the handle either up or down to your desired position release the button and allow the handle to lock into position, as per **Figure 8b**.



Using: Envy Stroller

APPLYING BRAKE

- Press down firmly on the red brake pedal located on rear wheel, as per **Figure 9a**.
- Ensure that both brakes have fully engaged.

Note: To release the brakes, lift the red brake pedal until it is fully disengaged. As per Figure 9b.



WARNING

Apply brake whenever you park the stroller.



To apply the brakes



To release the brakes

TO ADJUST THE RECLINE ANGLE OF THE SEAT

- Press and hold the buttons on both sides, as per **Figure 10a**.
- Adjust the seat to the desired angle, as per **Figure 10b**.



Using: Envy Stroller


TO OPERATE THE FRONT WHEEL SWIVEL LOCK

- The swivel wheel assembly can be locked in the straight forward direction or unlocked to rotate freely.
- Push down the slider located in the middle of the wheel assembly down, as per **Figure 11a**, to lock the front wheel swivel.
- Push up slider, as per **Figure 11b**, to unlock the front wheel swivel.



TO ADJUST THE FOOTREST


- Press and hold the buttons on both sides of the footrest simultaneously.
- Adjust the footrest to the desired angle. See **Figure 12a & 12b**.

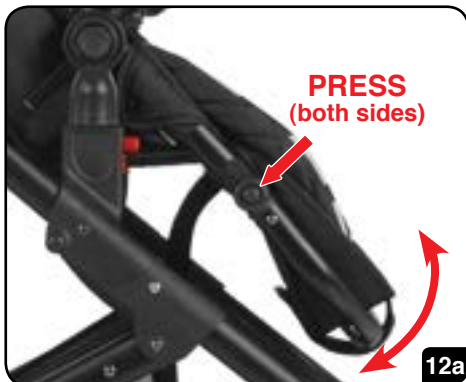

Using: Envy Stroller

TO FIT THE BOOTCOVER


- Apply the park brake.
- Place the bootcover over the stroller footrest, pull the bootcover up fully to the bumper bar.
- Turn the flap of the bootcover over the bumper, attach the velcro in the middle, as per **Figure 13a**.
- Pass the two plastic toggles on both side of the flap of bootcover through the elastic loop on both side of the bootcover, as per **Figure 13b**.
- Attach press stud, as per **Figure 13c & 13d**.
- Repeat for both sides.

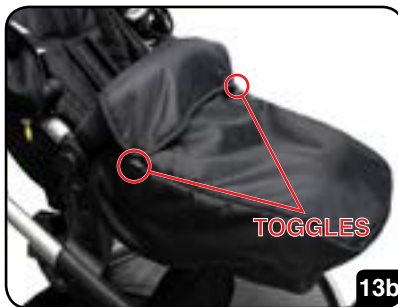

Using: Envy Stroller

TO REMOVE SEAT LINER

- Seat liner is reversible.
- To remove liner, first unbuckle harness and remove harness pads, as per **Figure 15a**.
- Feed the 5 straps through the seat liner, as per **Figure 15b**, until all straps are fully behind seat liner.
- Seat liner is now free to be turned to either side. Ensure each of the 5 straps are fully re-thread through the liner before using again.

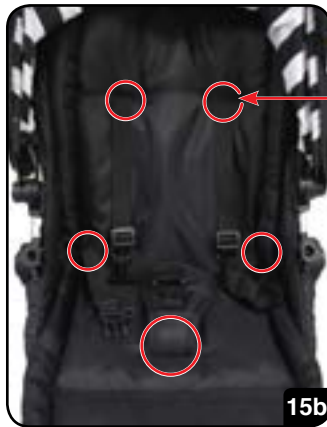


Using: Envy Stroller

SECURING YOUR CHILD





5 points of the harness can be adjusted by moving each straps' slider (**figure A1**).

To tighten or loosen the waist and/or shoulder straps, hold and lift the plastic adjuster. Adjust straps to desired position. The waist strap needs to fit firmly around the child.

1. Slip one shoulder strap (A) over each shoulder and position crotch strap between legs (B)

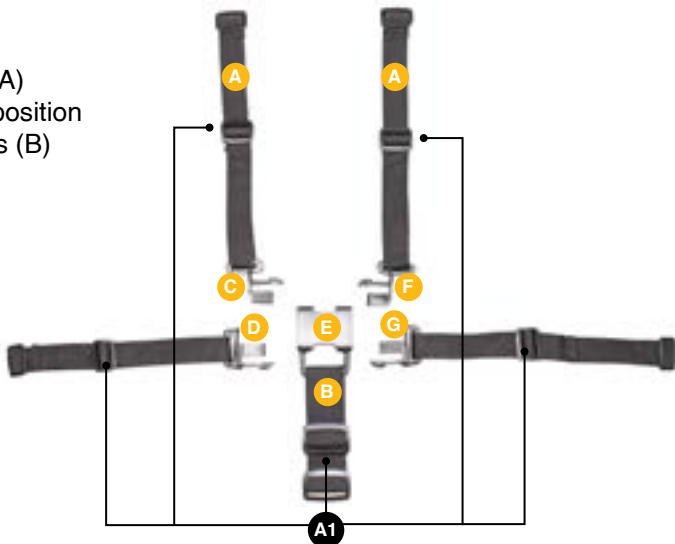

2. Place buckle prong (D) on top of buckle prong (C)
3. Insert the prongs into the buckle housing (E) until it clicks into position. Repeat the above steps for the opposite side (F and G). Pull straps to ensure they are locked into the buckle assembly.
4. The harness should resemble this image.
5. The buckle is released by squeezing the top and bottom prongs together until harness disengages. (Figure 5).

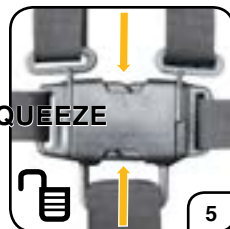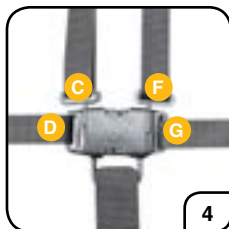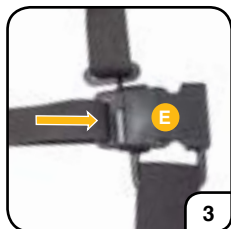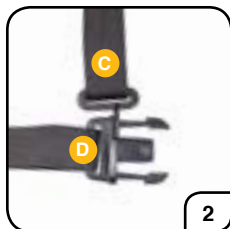

Using: Envy Stroller

ADJUSTING HARNESS HEIGHT

- The harness can be set at varying heights to accommodate the child, depending on the model.
- To change the shoulder harness height, position the shoulder straps near the child's shoulders and push the shoulder harness tongue out of the current harness slot and through the back of the seat. Pull the shoulder harness tongue through the desired slot.



WARNING:

- Use this harness at all times.
- A five-point harness is provided to secure your child.
- When not in use disconnect shoulder straps from the waist strap and buckle.
- The adjusted harness should closely fit the child.

TETHER STRAP



WARNING:

USE THIS STRAP TO STOP THE STROLLER ROLLING AWAY.

- Correct use of the tether strap will prevent stroller runaway and possible injury to the stroller occupant.
- Whenever a child is in the stroller and brakes are not engaged, the large loop should be around your wrist, as per **Figure 14**.





14

Using: Envy Stroller


TO FOLD THE STROLLER

- Apply the park brake.
- Stand the stroller upright.
- Remove all the seats, bassinets or infant carriers.
- Simultaneously pull up on both locks, as per **Figure 16a**.
- Push down on the stroller handle until the stroller is folded, and ensure the storage latch has fully engaged, as per **Figure 16b**.

Note: Lift handle to check that lock has fully engaged.

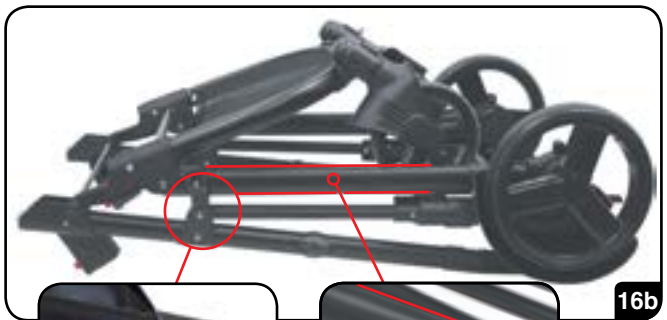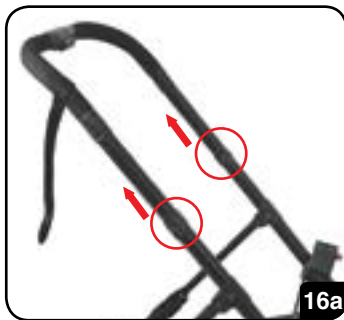

STORAGE LATCH

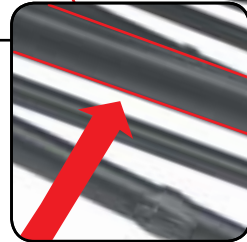

CARRY HERE

CARRYING STROLLER

- Fold the stroller, and ensure sure that storage latch is applied before continuing.
- Carry stroller by holding frame between rear wheel and storage latch, as per **Figure 16b**. Avoid holding the stroller in other locations to avoid injury from moving parts.

Using: Envy Stroller

TO FIT SINGLE RAINCOVER

- Spread the raincover over the stroller and underneath the handle.
- Pull the elasticated portion of the raincover over the legrest at the front of the stroller, as per **Figure 18**.



Elastic

Using: Safety 1st Bassinette



WARNING TO AVOID INJURY OR DEATH:

- **WARNING :** Do not use this bassinette once the child can sit up unaided.
- **WARNING :** Do not let other children play unattended near the Bassinette.
- **WARNING :** Do not use if any part is broken, torn or missing.
- **WARNING :** Use only on a firm ground which is horizontal, level and dry.
- Only use the mattress supplied with this bassinette.

FITTING THE SAFETY 1ST BASSINETTE

- Position the bassinette in **REARWARD FACING ONLY**, as per **Figure 19c**.
- Insert the bassinette into the frame, as per **Figure 19a**.
- Listen for '**CLICK**', as per **Figure 19b**.
- Your stroller with bassinette is now ready for use.



CORRECT POSITION




INCORRECT POSITION

Using: Safety 1st Bassinette


TO REMOVE THE BASSINETTE

- Slide and hold down button (A) with one hand and press button (B) with the other hand, as per **Figure 20a**.
- Then press the button (C) as per **Figure 20b**.
- Then lift out the bassinette with both hands, as per **Figure 20c**.

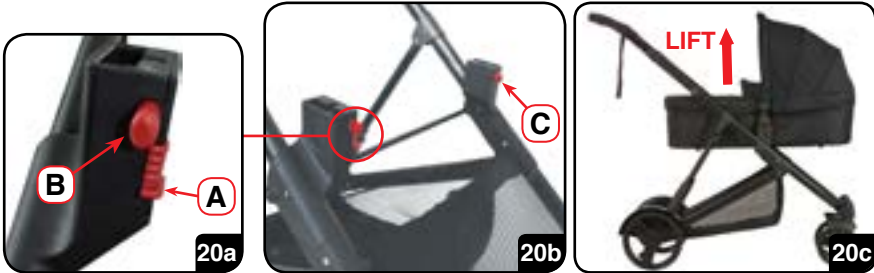

SECURING YOUR CHILD

- Adjust harness strap by moving slider on buckle.
- Guide the strap through the strap guard, and position as per **Figure 21**.
- Place infant in the bassinette and attach the buckle.
- The buckle is released by squeezing the buckle tongues together.

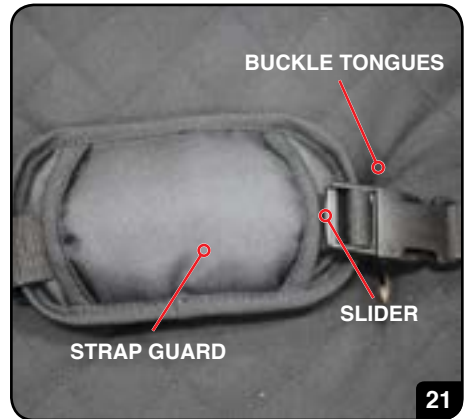

WARNING

Secure the child in the harness at all times.

Please refer to the instruction manual of the Safety 1st Bassinette for full coverage of features

Using: Infant Carrier

FITTING SAFETY 1ST ONE SAFE OR MAXI-COSI INFANT CARRIERS

- Insert the adaptors into the stroller frame **REARWARD FACING ONLY**, as per **Figure 22a**.
- Listen for '**CLICK**'.
- Maxi-Cosi adaptors are marked with either an '**R**' or '**L**'. When looking from the rear of the stroller, the adaptor marked '**R**' should be fitted in the right-hand side.

Ensure top tether strap for car use has been stored in accordance with instructions provided with Infant Carrier. **DO NOT** attempt to install the Infant Carrier into the stroller with child **FACING FORWARD**. For harness fitting & adjustment instructions for your Infant Carrier, please consult your instructions supplied with your Infant Carrier.



CORRECT POSITION




INCORRECT POSITION

Using: Infant Carrier

TO REMOVE THE ONE SAFE INFANT CARRIER

- Press both adaptors buttons to unlock the infant carrier and lift the infant carrier off the frame, as per **Figure 23a** .

Note: To remove the front adaptors. Slide and hold down button (A) and press button (B), as per Figure 23b. Then remove the adaptor, as per Figure 23c. Press the button (C) as per Figure 23d. Repeat for other side.

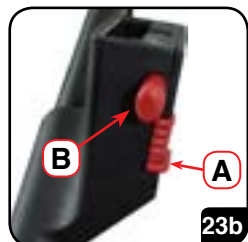


Using: Infant Carrier

TO REMOVE THE MAXI-COSI INFANT CARRIER

- Press both grey buttons to unlock the infant carrier and lift the infant carrier off the frame, as per **Figure 24a** .

Note: To remove the front adaptors. Slide and hold down button (A) and press button (B), as per Figure 24b. Then remove the adaptor, as per Figure 24c. Press the button (C) as per Figure 24d. Repeat for other side.

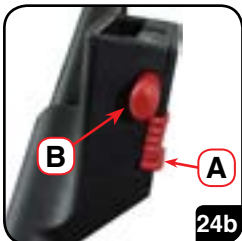

Using: Adaptors



Front Adaptors (x2)



Rear Adaptors (x2)



One Safe Infant Carrier Adaptors (x2)

Using: Adaptors (Sold Separately)



Maxi-Cosi Infant Carrier Adaptors



Maxi-Cosi Infant Carrier Adaptors



Infant Carrier Extension Adaptors

Maxi-Cosi Infant Carrier Adaptors & Extender Kit

Using: Adaptors

FITTING FRONT ADAPTORS

- The front adaptors are used when second seat or bassinette need to be installed.
- Insert both front adaptors into the frame as per **Figure 25a**.
- Listen for '**CLICK**'.
- Repeat for other side.

Note: To remove the front adaptors. Slide and hold down button (A) and press button (B), as per Figure 25b. Then remove the adaptor, as per Figure 25c. Press the button (C) as per Figure 25d. Repeat for other side.



Using: Adaptors

FITTING REAR ADAPTORS

- The rear adaptors are used when a second seat, bassinette or infant carrier need to be installed at the rear of the stroller frame.
- Align the adaptor on the rear frame as per **Figure 26a**. Slide the adaptor down it until it locks in place.
- Ensure that the adaptor has locked onto the frame.
- Repeat for other side.

Note: To remove the adaptors. Pull the adaptors release lever (A) in then slide the adaptor up and off the frame, as per Figure 26b. Repeat for other side.




Using: Adaptors

FITTING EXTENSION AND INFANT CARRIER ADAPTORS

(Sold Separately)

- The extension adaptors is used combined with infant carrier adaptors when a second seat, bassinette or infant carrier need to be installed at the rear of the stroller frame.
- Insert both extension adaptors into the front frame, as per **Figure 27a**.
- Listen for '**CLICK**'.
- Insert the infant carrier adaptors into the extension adaptors, as per **Figure 27a**.
- Listen for '**CLICK**'.

Note: To remove the adaptors. Slide and hold down button (A) and press button (B), then remove the adaptor, as per Figure 27b. Press the button (C), then remove the other side adaptor as per Figure 27b.

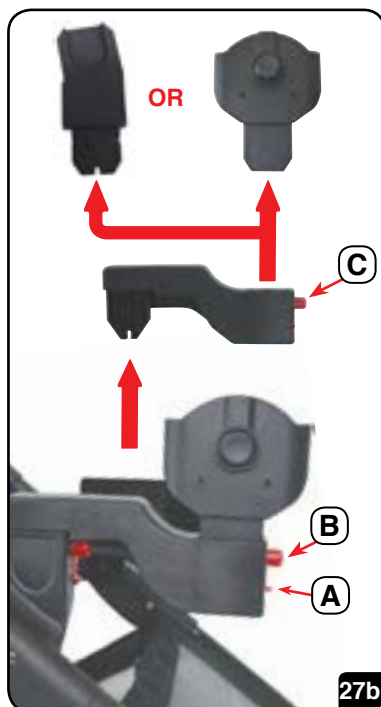

Configurations

FITTING ONE SEAT (Forward Facing) (Forward Facing)

- Insert the seat posts into the frame.
- Listen for '**CLICK**'.
- For further instruction regarding installation please refer to page 10.



Configurations

FITTING ONE SEAT (Rearward Facing)

- Insert the seat posts into the frame.
- Listen for '**CLICK**'.
- For further instruction regarding installation please refer to page 10.



Configurations

FITTING ONE BASSINETTE (Forward Facing)

- Insert the seat posts into the frame.
- Listen for '**CLICK**'.
- For further instruction regarding installation please refer to pages 19-20.



Configurations

FITTING ONE BASSINETTE (Rearward Facing)

- Insert the seat posts into the frame.
- Listen for '**CLICK**'.
- For further instruction regarding installation please refer to pages 19-20.



Configurations

FITTING ONE INFANT CARRIER

- Insert the adaptor followed by the infant carrier into the frame.
- Listen for **'CLICK'**.
- For further instruction regarding installation please refer to page 22 (for One Safe), or 23 (for Maxi-Cosi).



Configurations

FITTING TWO SEATS

- Insert the adaptors followed by the seats into the frame.
- Listen for '**CLICK**'.
- For further instruction regarding installation please refer to pages 25 & 26.



Configurations

FITTING TWO SEATS

- Insert the adaptors followed by the seats into the frame.
- Listen for **'CLICK'**.
- For further instruction regarding installation please refer to pages 25 & 26.



Configurations

FITTING TWO SEATS


- Insert the adaptors followed by the seats into the frame.
- Listen for **'CLICK'**.
- For further instruction regarding installation please refer to pages 25 & 26.



Configurations

FITTING TWO BASSINETTES


- Insert the adaptors followed by the bassinets into the frame.
- Listen for **'CLICK'**.
- For further instruction regarding installation please refer to pages 25 & 26.

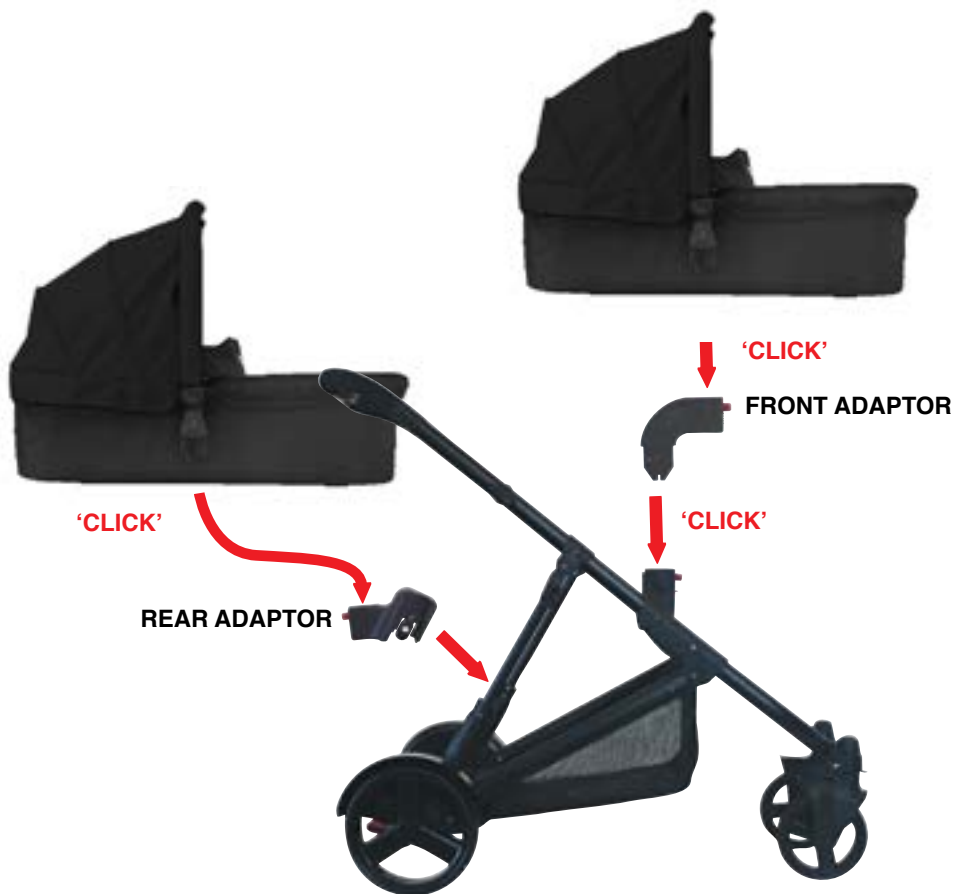

Configurations

FITTING TWO BASSINETTES


- Insert the adaptors followed by the bassinets into the frame.
- Listen for **‘CLICK’**.
- For further instruction regarding installation please refer to pages 25 & 26.

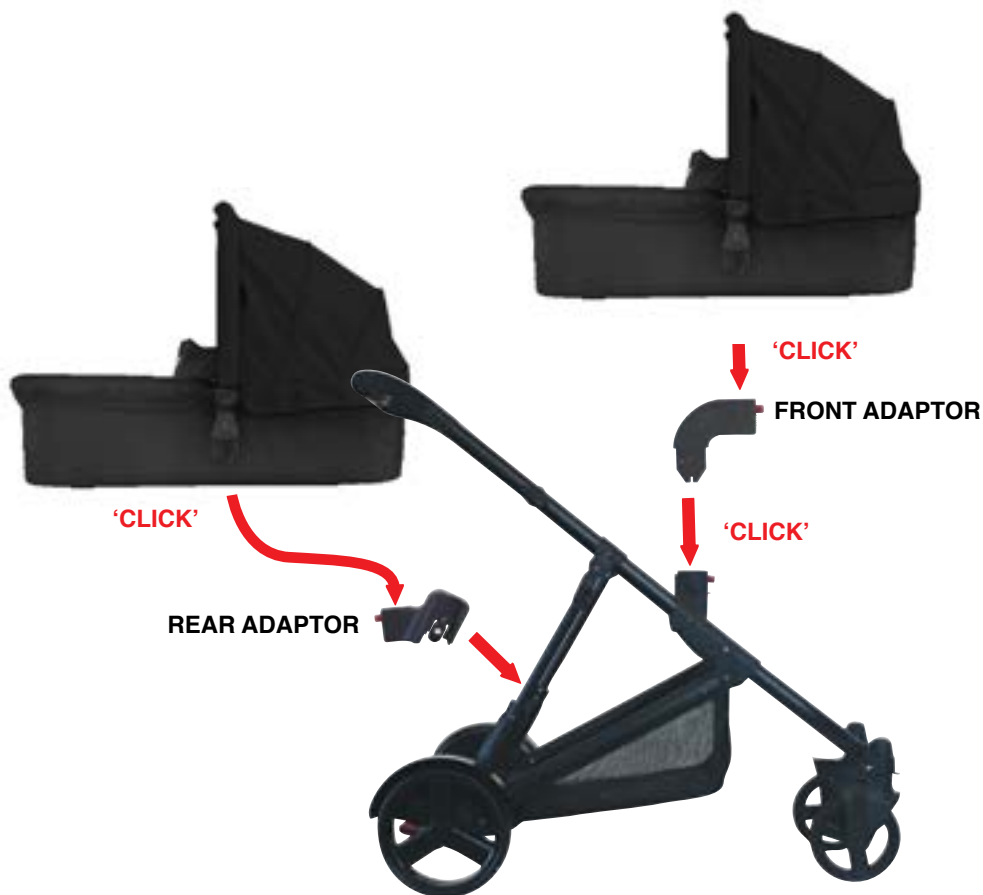

Configurations

FITTING TWO BASSINETTES

- Insert the adaptors followed by the bassinets into the frame.
- Listen for '**CLICK**'.
- For further instruction regarding installation please refer to pages 25 & 26.

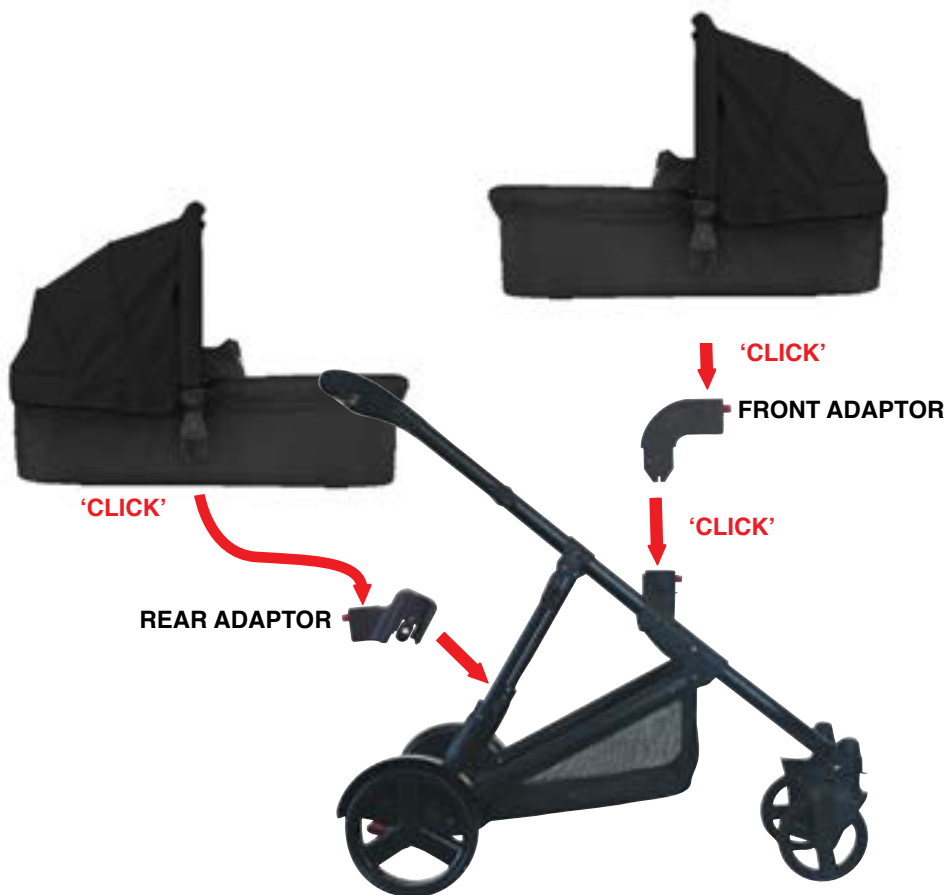

Configurations

FITTING ONE SEAT AND ONE BASSINETTE


- Insert the adaptors followed by the bassinets and seat into the frame.
- Listen for **'CLICK'**.
- For further instruction regarding installation please refer to pages 25 & 26.



Configurations

FITTING ONE SEAT AND ONE BASSINETTE


- Insert the adaptors followed by the seat and bassinette into the frame.
- Listen for **'CLICK'**.
- For further instruction regarding installation please refer to pages 25 & 26.

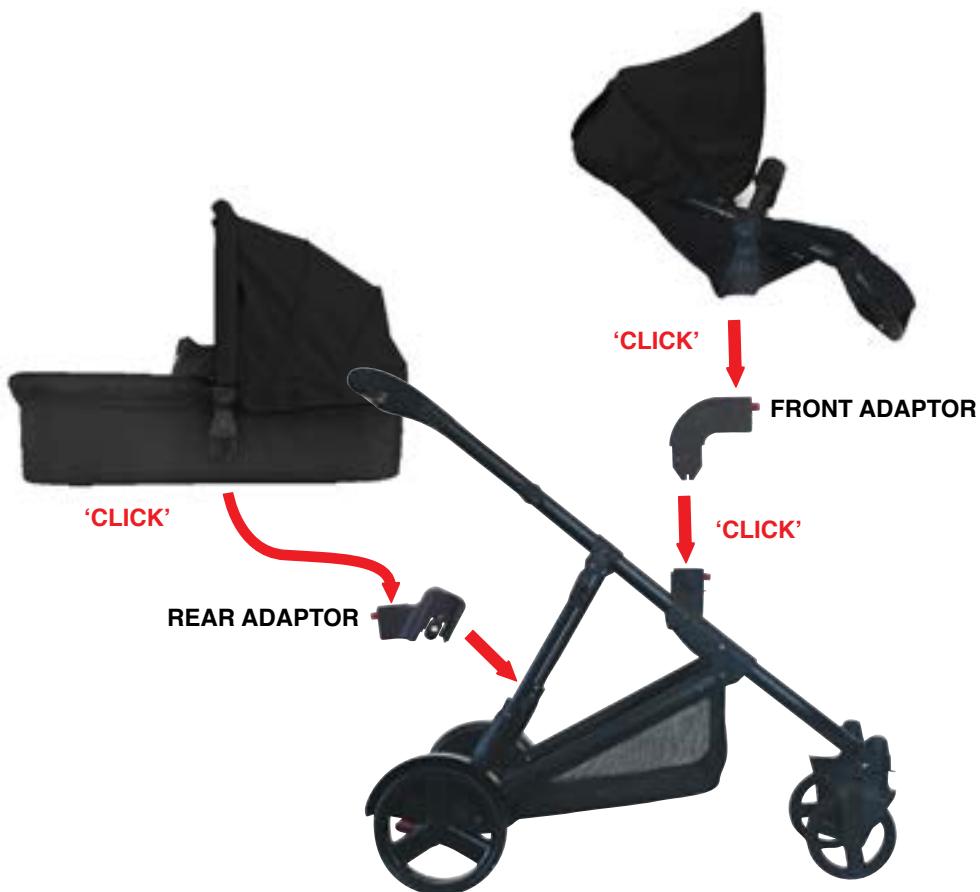

Configurations

FITTING ONE SEAT AND ONE BASSINETTE

- Insert the adaptors followed by the seat and bassinette into the frame.
- Listen for **'CLICK'**.
- For further instruction regarding installation please refer to pages 25 & 26.

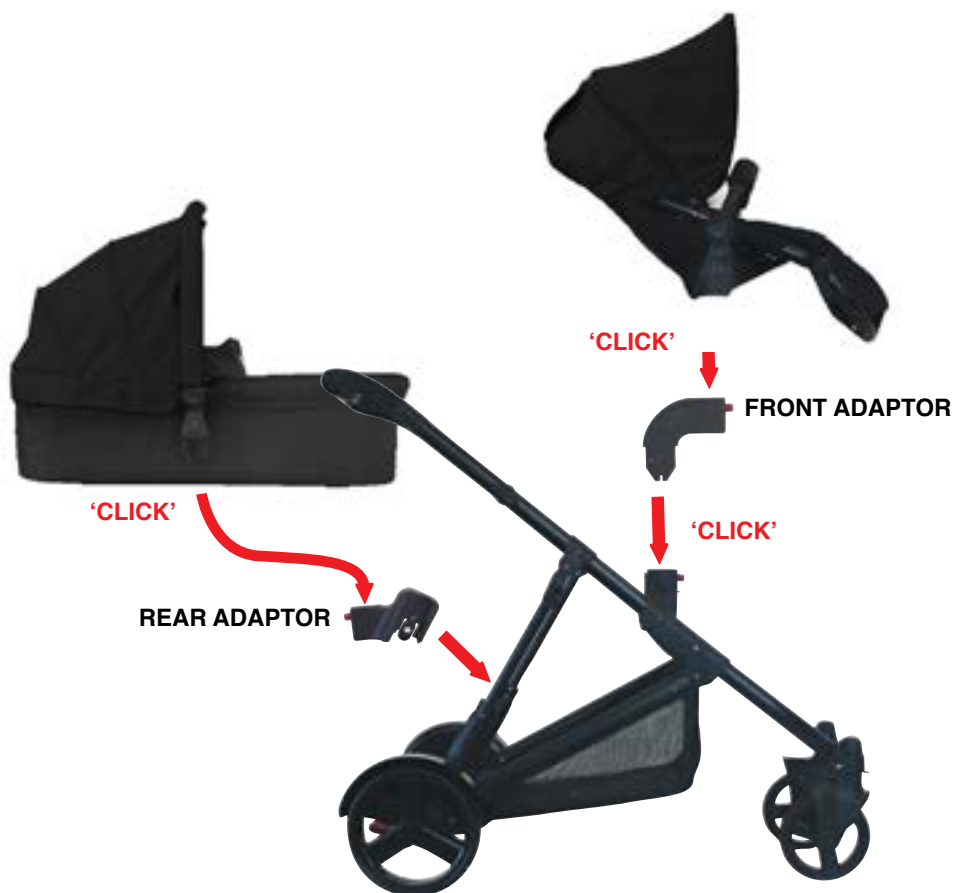

Configurations

FITTING ONE SEAT AND ONE BASSINETTE

- Insert the adaptors followed by the seat and bassinettes into the frame.
- Listen for '**CLICK**'.
- For further instruction regarding installation please refer to pages 25 & 26.



Configurations

FITTING TWO INFANT CARRIERS

- Insert the adaptors followed by the infant carrier into the frame.
- Listen for **'CLICK'**.
- For further instruction regarding installation please refer to pages 25, 26 & 27.



Configurations

FITTING ONE INFANT CARRIER AND ONE SEAT

- Insert the adaptors followed by the infant carrier and seat into the frame.
- Listen for **'CLICK'**.
- For further instruction regarding installation please refer to pages 25, 26 & 27.



Configurations

FITTING ONE INFANT CARRIER AND ONE SEAT

- Insert the adaptors followed by the infant carrier and seat into the frame.
- Listen for **'CLICK'**.
- For further instruction regarding installation please refer to pages 25 & 26.



Configurations

FITTING ONE INFANT CARRIER AND ONE BASSINETTE

- Insert the adaptors followed by the infant carrier and seat into the frame.
- Listen for **'CLICK'**.
- For further instruction regarding installation please refer to pages 25, 26 & 27.



Configurations

FITTING ONE INFANT CARRIER AND ONE BASSINETTE

- Insert the adaptors followed by the infant carrier and seat into the frame.
- Listen for **'CLICK'**.
- For further instruction regarding installation please refer to pages 25, 26 & 27.



Configurations

TO FIT DOUBLE RAIN COVER (Sold separately)

- Use double raincover only when two seats are in use.
- Adjust seats in the upright position.
- Spread the rain cover over the stroller and around the two seats, as per **Figure 28**.



Care and Maintenance

CARE AND MAINTENANCE

- Always store in a clean and dry place.
- Clean the frame by wiping with a damp cloth.
- Do not use abrasives, bleach or strong detergents.
- Spot clean fabrics with warm water and mild soap.
- Ensure fabric is dry before storing.
- Occasionally clean and lubricate wheels with a light lubricating oil.
- Regularly check for loose parts and tighten when required.
- Damaged or broken parts should be immediately replaced.

Notes

[illegible]

Notes

[illegible]

safety1st.com.au

DOREL AUSTRALIA PTY LTD
655-685 Somerville Road
Sunshine West Victoria 3020
Email: customerservice@dorel.com.au
Phone: 1300 809 526
Hours: 8:30 am - 5:00 pm
Monday to Friday

IGC DOREL NEW ZEALAND LTD
14 Sir William Avenue
East Tamaki Auckland 2013
Email: customerservice@igc.co.nz
Phone: 0800 628 000 (toll free)
Hours: 8:00 am - 5:00 pm
Monday to Friday



Specifications are subject to change without notice.
Copy or reproduction without permission is prohibited.
© 2013 Dorel Australia Pty Ltd. All Rights Reserved.

www.dorel.com.au