

Safety **1st**[®]

WANDERER X 3 WHEEL STROLLER

Suitable for newborn to 17kg



Illustration and designs may vary.

CONTENTS

Warnings	3
Components list	4 - 5
ASSEMBLING THE STROLLER	
Opening Stroller	6
Wheel Assembly	7 - 8
Fitting Seat	9
Bumper Bar	10
USING THE STROLLER	
Canopy	11
Front Swivel Wheel	12
Operating Brakes	13
Adjusting Handle / Backrest / Legrest	14 - 15
Securing your Child	16
Adjusting Harness Height / Tether Strap	17
Folding / Unfolding / Carrying Stroller	18 - 19
BASSINETTE AND INFANT CARRIER	
Install and Use Bassinette	20 - 22
Install and Use Infant Carrier	23 - 24
CARE AND MAINTENANCE	
Care and Maintenance	25
Notes	26 - 27
CONTACTS	
Customer Service	28

These instructions detail the safe use, assembly and maintenance of your product. Please read these instructions carefully and ensure that they are followed at all times. Failure to do so could result in serious injury or death.



WARNING TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- **DO NOT LEAVE CHILDREN UNATTENDED.**
- **DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.**
- **MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.**
- **SECURE THE CHILD IN THE HARNESS AT ALL TIMES AND ENSURE THAT THE SAFETY HARNESS IS ADJUSTED FIRMLY BUT COMFORTABLY TO THE CHILD'S BODY.**
- A harness can form loops that may be a strangulation hazard, never leave harness straps connected when not fitted to a child in the stroller.
- Use the tether strap to prevent the stroller rolling away.
- Do not allow children to stand on the seat or footrest.
- Do not attempt to lift the stroller by the bumper bar.
- Remove the child from the stroller before going up or down stairs or escalators.
- Engage front wheel swivel locks when travelling on rough or uneven surfaces.
- Regularly inspect the stroller for any parts that are loose, broken, torn or missing. Attend to the problem as soon as it is noticed.
- Use only those accessories which are supplied by Dorel Australia and approved for use with this stroller.
- Do not use the stroller near an open fire, barbecue or exposed flame.
- This product is not intended for commercial use.
- Do not run or jog with this stroller.
- This product is tested to AS/NZ 2088:2013

Components Sold Separately



Maxi-Cosi Infant Carrier



Wanderer Bassinette



**Safety 1st
Universal Raincover**



**Maxi-Cosi Infant
Carrier Adaptors x2**

Note:

- The weight of the child using this stroller should not be more than **17kg**.
- Total weight for the shopping basket should **not** be more than **4kg**.
- The weight of the child using the Infant Carrier should **not** be more than **9kg**.
- The weight of the child using the Bassinette should **not** be more than **9kg**.
- Please refer to instruction manuals of the Maxi-Cosi Infant Carrier & Wanderer Bassinette for full weight and height specifications.

Component List






1. Handle Height Adjustment
2. Tether Strap
3. Folding Lock (both sides)
4. Storage Latch
5. Shopping Basket
6. Brake Lever (both sides)
7. Rear Wheels Assembly
8. Never Flat Tyres (x3)

9. Canopy
10. Mesh Seat Pad
11. Bumper Bar
12. Harness Pads
13. Safety Harness
14. Adjustable Legrest
15. Swivel Wheel Lock
16. Front Wheel

Assembling: Wanderer Stroller

OPENING STROLLER

- If the stroller has a security tie, please remove it.
- Lift storage latch to release, as per **Figure 1a**.
- Unfold stroller by lifting handle as per **Figure 1b** until the locking mechanism engages, as per **Figure 1c**.

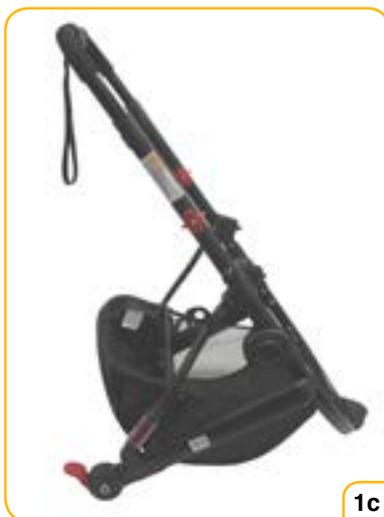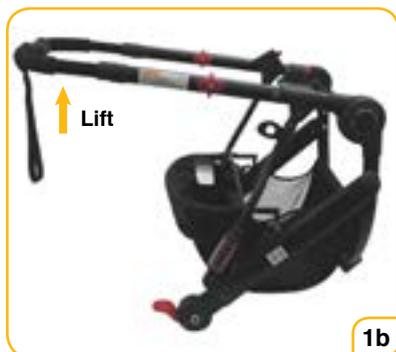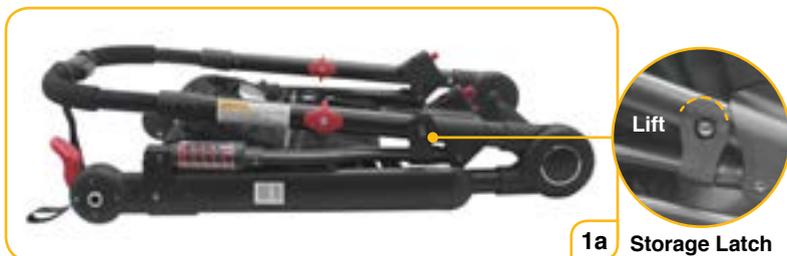

Note:

- Folding strollers and accessories will always have the potential to trap fingers or parts of the body between moving parts, causing injuries. Care should be taken while folding or unfolding.
- This vehicle is designed for use on flat or gently sloping surfaces and may be unstable on higher sloping and uneven surfaces. You should always be aware of the possibility of the stroller tipping on uneven or higher sloping surfaces.

Assembling: Wanderer Stroller

TO FIT REAR WHEELS

- Slide rear wheel onto the wheel hub, as per **Figure 2a**.
- Repeat for other side.

TO REMOVE REAR WHEELS

- Push and hold metal tab, as per **Figure 2b**.
- Pull rear wheel from the hub, as per **Figure 2c**.
- Repeat on other side.



Note:
Never Flat tyres do not require air.
The tyres are maintenance free.


Assembling: Wanderer Stroller

TO FIT FRONT WHEEL

- Lift the front of the stroller and push the shaft into the front wheel hub, as per **Figure 3a**.
- Listen for '**CLICK**' to confirm locking position.

TO REMOVE FRONT WHEEL

- Slide the plastic button while pulling the front wheel off the front hub, as per **Figure 3b**.

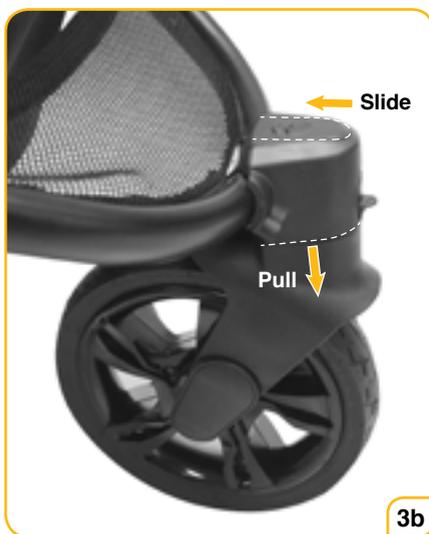



Assembling: Wanderer Stroller

TO FIT THE SEAT

- The seat can be positioned in either the forward facing **Figure 4a** or rearward facing **Figure 4c** configuration. Insert the seat onto the frame by lowering the seat into the frame, as per **Figure 4b**.
- Listen for ‘**CLICK**’.

TO REMOVE THE SEAT

- Slide and hold down button **(A)** with one hand and press button **(B)** with the other hand, as per **Figure 4d**.
- Then press button **(C)** and lift out the seat, as per **Figure 4e**.

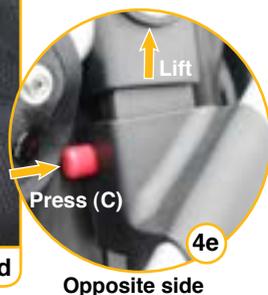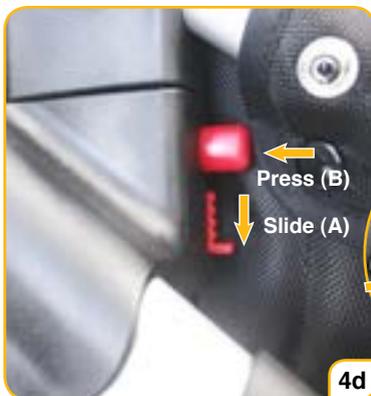

WARNING

Do not use this seat with any other models of stroller.



Using: Wanderer Stroller

TO FIT BUMPER BAR

- Align bumper bar mounting slider with the mounting brackets, as per **Figure 5a** and slide down until it locks into place.
- Repeat on other side.

TO REMOVE BUMPER BAR

- Remove bumper bar from frame.
- Press the plastic button and slide bumper bar upwards, as per **Figure 5b** & **Figure 5c**.

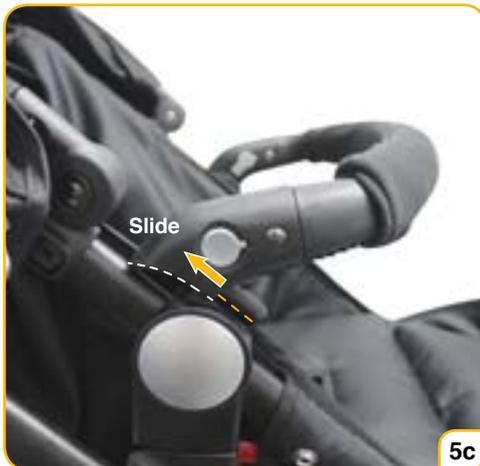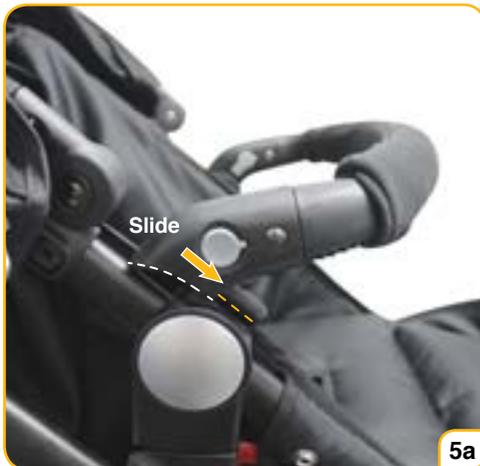



Using: Wanderer Stroller

TO FIT THE CANOPY

- Align the ends of the canopy with the stroller frame and push down until it locks into place, as per **Figure 6a**.
- Pull the front edge of the canopy to open, as per **Figure 6c & 6d**.
- Extend canopy by opening the zip on the side, as per **Figure 6e**.

TO REMOVE THE CANOPY


- Close the zip.
- Push canopy backwards.
- To remove canopy, pull the canopy ends from the mounting brackets, as per **Figure 6b**.

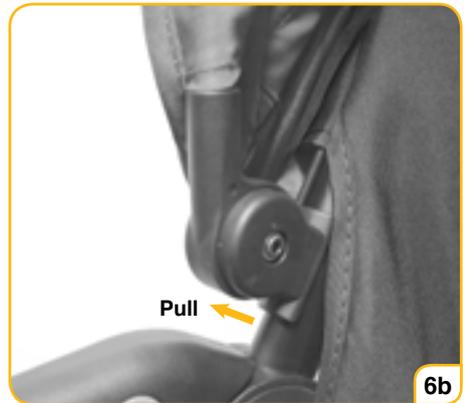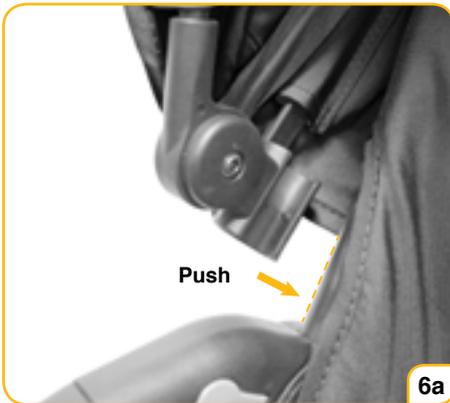

Using: Wanderer Stroller

FRONT SWIVEL WHEEL

- **TO LOCK:** Push the swivel lock downwards, as per **Figure 7a**.
- **TO UNLOCK:** Lift the swivel lock upwards, as per **Figure 7b**.

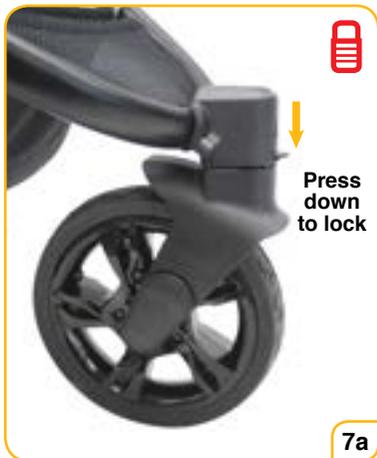


Using: Wanderer Stroller

OPERATING BRAKES

- **TO APPLY THE BRAKES:** Press down firmly on the brake pedal using the ball of your foot, as per **Figure 8a**.
- Both indicators should be red, as per **Figure 8b**.



- **TO RELEASE THE BRAKES:** Lift the red brake pedal until it is fully disengaged, as per **Figure 8c**.
- Both indicators should be green, as per **Figure 8d**.

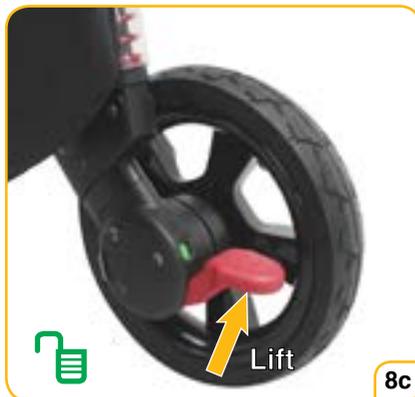

WARNING


Apply all the brakes whenever you park the stroller.

Using: Wanderer Stroller

ADJUSTING HANDLE

- Press adjustment button and pull the handle up or downward to the desired position, as per **Figure 9**.

Note: Listen for click.

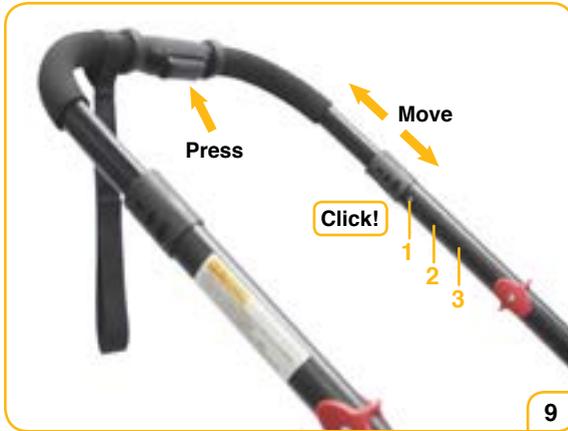

ADJUSTING THE BACKREST

- Lift the lever, as per **Figure 10a** and set the backrest to the desired position, as per **Figure 10b**.

Note: The backrest can be adjusted to 3 different positions.




Using: Wanderer Stroller

ADJUSTING THE LEGREST

- Press both adjustment buttons simultaneously and lift to the desired position, as per **Figure 11a & 11b**.

Note: Listen for click.

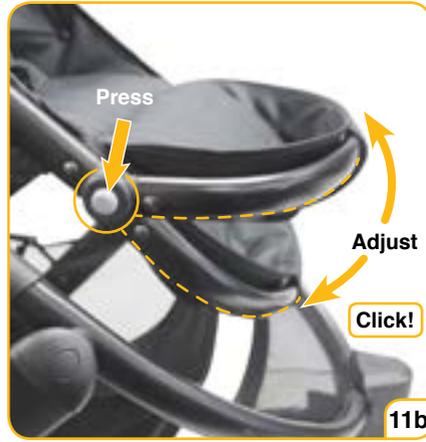


Using: Wanderer Stroller

SECURING YOUR CHILD




5 points of the harness can be adjusted by moving each straps' slider (**figure A1**).

To tighten or loosen the waist and/or shoulder straps, hold and lift the plastic adjuster. Adjust straps to desired position. The waist strap needs to fit firmly around the child.

1. Slip one shoulder strap (A) over each shoulder and position crotch strap between legs (B)

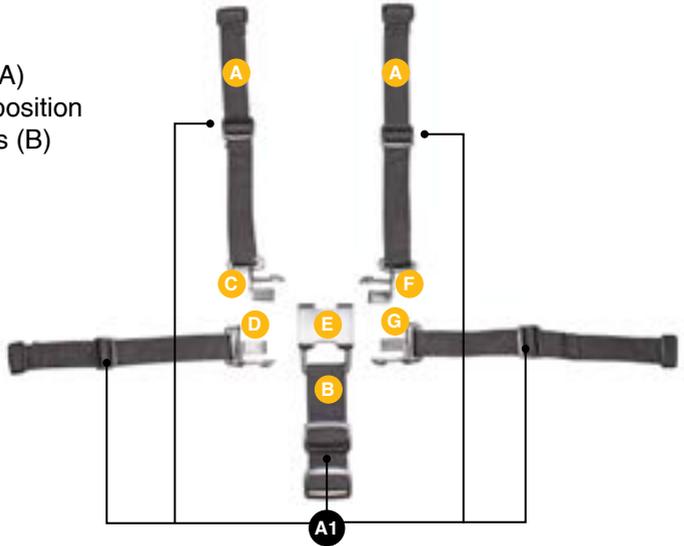

2. Place buckle prong (D) on top of buckle prong (C)
3. Insert the prongs into the buckle housing (E) until it clicks into position. Repeat the above steps for the opposite side (F and G). Pull straps to ensure they are locked into the buckle assembly.
4. The harness should resemble this image.
5. The buckle is released by squeezing the top and bottom prongs together until harness disengages. (Figure 5).

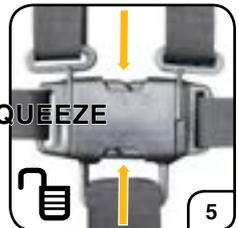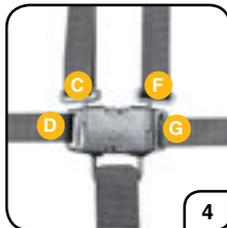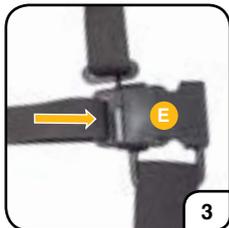

Using: Wanderer Stroller

ADJUSTING HARNESS HEIGHT

- The harness can be set at varying heights to accommodate the child, depending on the model.
- To change the shoulder harness height, position the shoulder straps near the child's shoulders and push the shoulder harness tongue out of the current harness slot and through the back of the seat. Pull the shoulder harness tongue through the desired slot.



WARNING:

- Use this harness at all times.
- A five-point harness is provided to secure your child.
- When not in use disconnect shoulder straps from the waist strap and buckle.
- The adjusted harness should closely fit the child.

TETHER STRAP

WARNING:

USE THIS STRAP TO STOP THE STROLLER ROLLING AWAY.

- Correct use of the tether strap will prevent stroller runaway and possible injury to the stroller occupant.
- Whenever a child is in the stroller and brakes are not engaged, the large loop should be around your wrist, as per **Figure 14**.




Using: Wanderer Stroller

FOLDING STROLLER

- Apply brakes.
- Fold the canopy.
- Unlock the front swivel wheel.
- Adjust the seat backrest to full layback position.
- Pull the folding locks on both sides up and simultaneously press down to fold the stroller, as per **Figure 15a**.
- Fold the stroller, as per **Figure 15b**.
- Storage latch will automatically lock, as per **Figure 15b**.

Note: Lift handle to check that the lock has fully engaged.

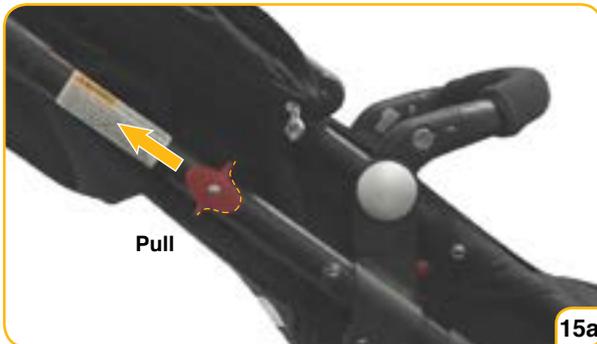


UNFOLDING STROLLER

- Refer to page 6, **Opening Stroller**, and follow same steps to unfold.

Using: Wanderer Stroller

CARRYING STROLLER

- Fold the stroller, and ensure sure that storage latch is applied before continuing.
- Carry stroller by holding frame between folding lock and storage latch, as per **Figure 16**. Avoid holding the stroller in other locations to avoid injury from moving parts.

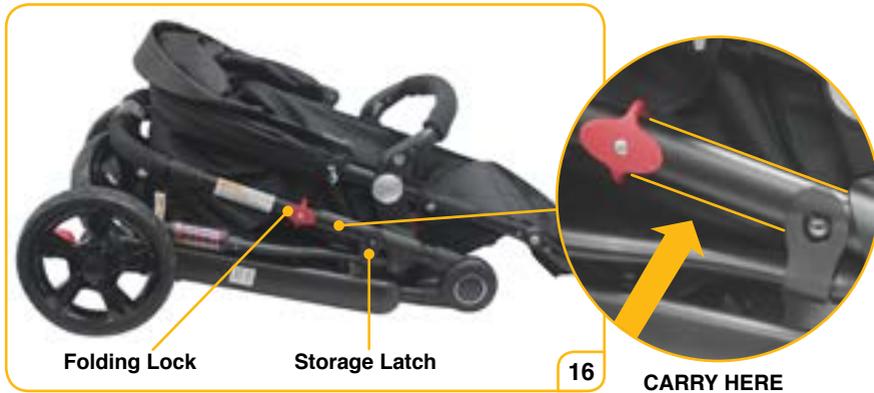

Using: Bassinette (Sold Separately)



WARNING TO AVOID INJURY OR DEATH:

- **WARNING:** Do not use this bassinette once the child can sit up unaided.
- **WARNING:** Do not let other children play unattended near the bassinette.
- **WARNING:** Do not use if any part is broken, torn or missing.
- **WARNING:** Use only on a firm ground which is horizontal, level and dry.
- Only use the mattress supplied with this bassinette.

FITTING THE WANDERER BASSINETTE

- Position the bassinette in **REARWARD FACING ONLY**, as per **Figure 17c**.
- Insert the bassinette into the frame, as per **Figure 17a**.
- Listen for '**CLICK**'.
- Your stroller with bassinette is now ready for use.



INCORRECT POSITION




CORRECT POSITION

Using: Bassinette (Sold Separately)

TO REMOVE THE BASSINETTE

- Slide and hold down button **(A)** with one hand and press button **(B)** with the other hand, as per **Figure 18a**.
- Then press button **(C)** and lift out the bassinette, as per **Figure 18b**.

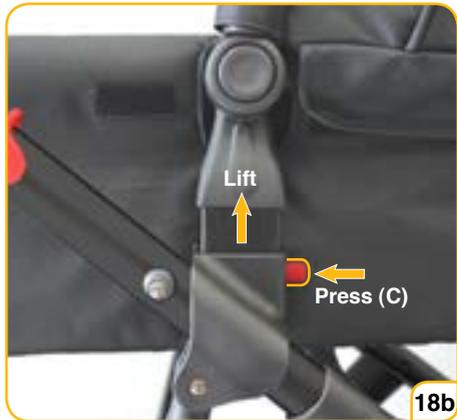

SECURING YOUR CHILD

- The buckle is released by squeezing the buckle tongues together, as per **Figure 19**.
- Place infant in the bassinette and reattached the buckle.



Using: Bassinette (Sold Separately)

TO FIT THE BOOTCOVER

- Place the end of the footcover over the bassinette, attach the velcro on both sides.
- Inside the hood of the bassinette are two press studs, attach these to studs located on the lower inside of the bassinette hood, as per **Figure 20**.



Using: Infant Carrier (Sold Separately)

FITTING MAXI-COSI INFANT CARRIER

- Insert the adaptor followed by the infant carrier into the frame **REARWARD-FACING ONLY** as per **Figure 21a**. Listen for '**CLICK**'.
REARWARD-FACING ONLY
- Maxi-Cosi adaptors are marked with either an 'R' or 'L'. When looking from the rear of the stroller, the adaptor marked 'R' should be fitted in the right-hand side, as per **Figure 21a**.

Ensure top tether strap for car use has been stored in accordance with instructions provided with Infant Carrier. **DO NOT** attempt to install the Infant Carrier into the stroller with child **FACING FORWARD**. For harness fitting & adjustment instructions for your Infant Carrier, please consult your instructions supplied with your Infant Carrier.



CORRECT POSITION




INCORRECT POSITION

Using: Infant Carrier (Sold Separately)

TO REMOVE THE INFANT CARRIER AND ADAPTORS

- Press both grey buttons to unlock the infant carrier and lift the infant carrier off the frame, as per **Figure 22**.
- To remove the infant carrier adaptors, press the buttons on the frame and pull adaptors off.

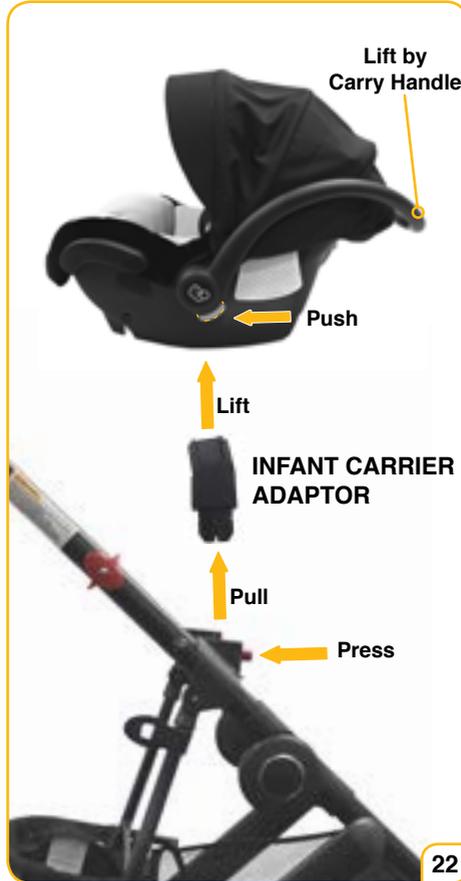

Care and Maintenance

CARE AND MAINTENANCE

- Always store in a clean and dry place.
- Clean the frame by wiping with a damp cloth.
- Do not use abrasives, bleach or strong detergents.
- Spot clean fabrics with warm water and mild soap.
- Ensure fabric is dry before storing.
- Occasionally clean and lubricate wheels with a light lubricating oil.
- Regularly check for loose parts and tighten when required.
- Damaged or broken parts should be immediately replaced.

safety1st.com.au

DOREL AUSTRALIA PTY LTD
655-685 Somerville Road
Sunshine West Victoria 3020
Email: customerservice@dorel.com.au
Phone: 1300 809 526
Hours: 8:30 am - 5:00 pm
Monday to Friday

IGC DOREL NEW ZEALAND LTD
14 Sir William Avenue
East Tamaki Auckland 2013
Email: customerservice@igc.co.nz
Phone: 0800 628 000 (toll free)
Hours: 8:00 am - 5:00 pm
Monday to Friday



Specifications are subject to change without notice.
Copy or reproduction without permission is prohibited.
© 2016 Dorel Australia Pty Ltd. All Rights Reserved.

www.dorel.com.au